

Thank you for purchasing the MXA-5000 AIS RECEIVER. Please read these instructions carefully before installation and operation.

PRECAUTIONS


- **NEVER** apply AC power to the [DC 12 V] connector on the rear panel. This could cause a fire or damage the receiver.
- **NEVER** connect the receiver to a power source of more than 16 V DC such as a 24 V battery. This will damage the receiver.
- **NEVER** connect the receiver to a power source using reverse polarity. This will damage the receiver.
- **NEVER** cut the DC power cable between the DC plug and fuse holder. If an incorrect connection is made after cutting, the receiver may be damaged.
- **NEVER** expose the receiver to rain, snow or any liquids. The receiver may be damaged.
- **NEVER** touch the receiver with wet hands. This may result in an electric shock or damage the receiver.
- **NEVER** apply more than 25 W RF power or out of VHF marine frequency (156.000 to 161.450 MHz) to the [RADIO] connector on the rear panel. This will damage the receiver.
- **DO NOT** use or place the receiver in areas with temperatures below -20°C (-4°F) or above $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$) or in areas subject to direct sunlight, such as the dashboard.
- **DO NOT** use chemical agents such as benzine or alcohol when cleaning, as they can damage the receiver's surfaces.
- Place unit in a secure place to avoid inadvertent use by children.

FEATURES

- **Dualwatch operation**
Two independent receivers can simultaneously receive CH87B (161.975 MHz) and CH88B (162.025 MHz).
- **Power divider built-in**
A power divider is built-in the MXA-5000. This provides easy installation as well, since no extra antenna is necessary— just connect the receiver between your VHF marine transceiver and an antenna.
 - The internal power divider protects the receiver from a transmit signal of the VHF marine transceiver.
- **GPS receiver is connectable**
When a GPS receiver is connected, the GPS information is added to the received AIS information, and can be sent to the connected PC or navigation system.


SUPPLIED ACCESSORIES

- ① DC power cable 1
 - ② Angle..... 2
 - ③ Set screws (M3×6 mm) 4
 - ④ Self-tapping screws (M5×20 mm) 4
 - ⑤ Spring washers 4
 - ⑥ Flat washers..... 4
- 1 mm = 1/32 inch

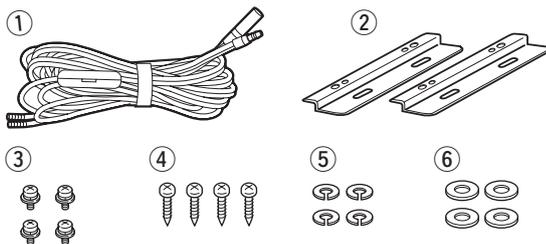

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries. All other products or brands are registered trademarks or trademarks of their respective holders.


PANEL DESCRIPTIONS

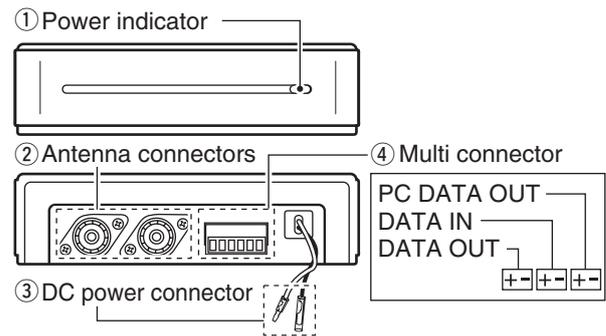

- ① **POWER INDICATOR**
Lights green during power ON.
- ② **ANTENNA CONNECTORS**
 - **[ANTENNA]**
Connects to a VHF marine antenna with a PL-259 connector.
 - **[RADIO]**
Connects to a VHF marine transceiver with a PL-259 connector.
 - VHF marine transceiver: Output power 25 W nominal and transmit frequency range from 156.000 MHz to 161.450 MHz.
- ③ **DC POWER CONNECTOR [12V DC]**
Connects the supplied DC power cable from this connector to an external 12 V DC power source.
- ④ **MULTI CONNECTOR**
 - **[PC DATA OUT]**
Connects to a PC.
 - **[DATA IN]**
Connects to a GPS receiver.
 - **[DATA OUT]**
Connects to a navigation equipment.


When a VHF marine transceiver is connected with an antenna through the MXA-5000, its receive sensitivity will be reduced (Insertion loss: approx. 3 dB). This is normal, and does not indicate the receive's malfunction.

CONNECTIONS

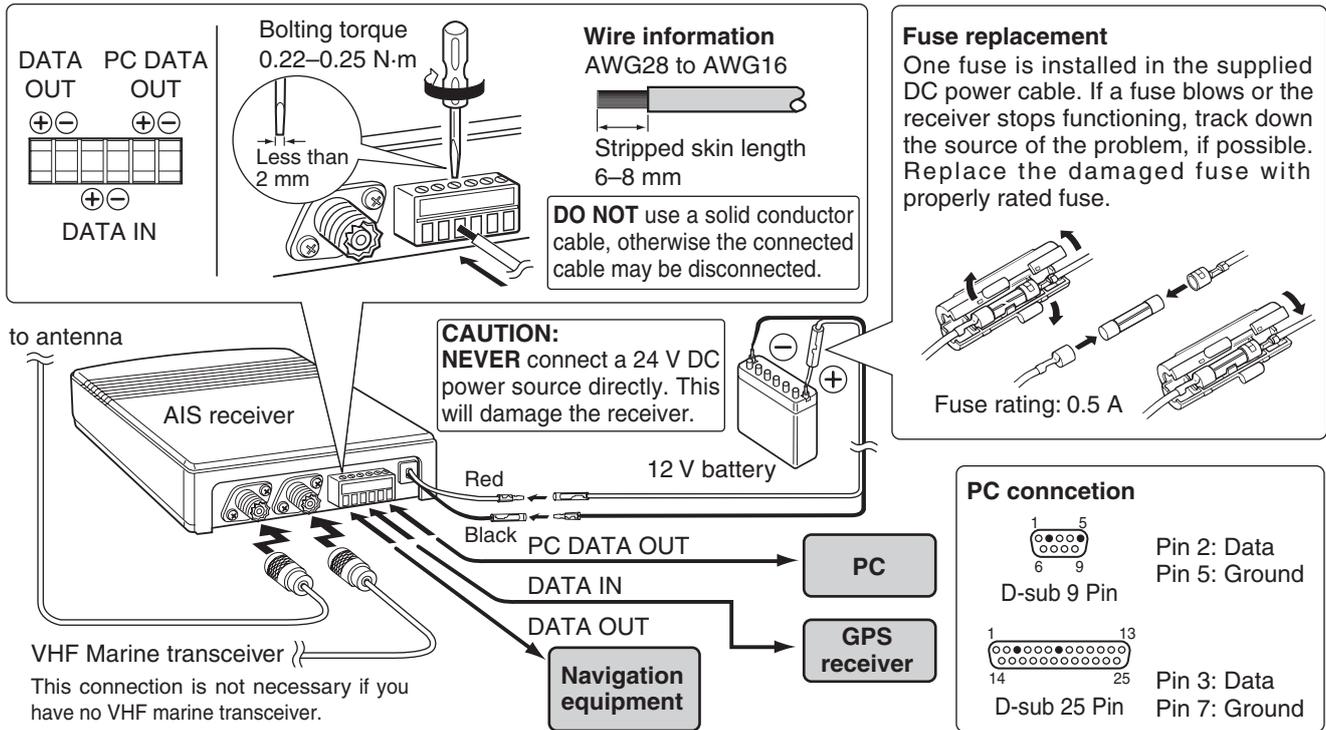


INSTALLATION

- ① Attach the supplied angles to bottom side of the receiver, and tighten the two supplied screws (M3×6 mm) on each angle.

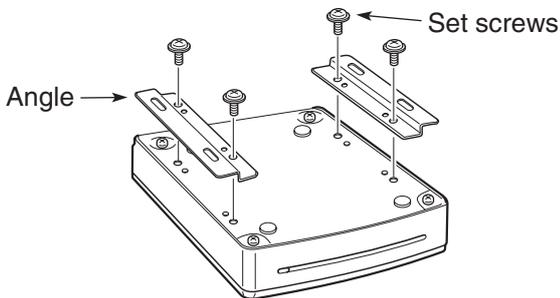

- ② Mount the receiver securely with the four supplied screws (M5×20 mm) to a flat surface which is more than 10 mm (13/32 inch) thick and can support more than 2 kg (4.4 lb).

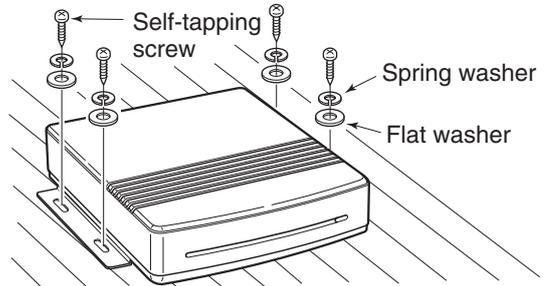

SPECIFICATIONS

◇ General

- Frequency coverage : 161.975 MHz, 162.025 MHz
- Type of emission : 16K0F1D (GMSK)
- Antenna impedance : 50 Ω nominal
- Operating temp. range : -20°C to +60°C; -4°F to +140°F
- Power supply requirement : 12 V DC nominal (10.8 V to 15.6 V) (negative ground)
- Current drain : 0.25 A
- Dimensions (Projections not included)
 - Without Angle : 132(W) × 34(H) × 155(D) mm
 - 5 3/16(W) × 1 11/32(H) × 6 3/32(D) in
 - Angle attached : 158(W) × 39(H) × 155(D) mm
 - 6 7/32(W) × 1 17/32(H) × 6 3/32(D) in
- Weight (Approx.)
 - Without Angle : 400 g (14.1 oz)
 - Angle attached : 460 g (16.2 oz)
- DATA input interface : IEC61162-1: 2000 (4,800 bps)
 - Sentence formatters : RMC, GGA, GNS, and GLL
 - Input level : Less than 2 mA (When 2 V is applied)

- DATA output interface :
 - To navigation equipment : IEC61162-2 (38,400 bps)
 - Sentence formatter : VDM
 - Output level : 5 V, 40 mA max
 - RS-422 balanced type
 - To PC : Baud rate 38,400 bps
 - Sentence formatter : VDM
 - Output level : ±5 V, ±35 mA typical
 - RS-232C unbalanced type

◇ Receiver

- Sensitivity : 0.35 μV (typical)
- Adjacent channel selectivity : More than 70 dB
- Spurious response : More than 70 dB
- Intermodulation : More than 65 dB
- Hum and noise : More than 40 dB
- Conducted spurious emission : Less than -57 dBm

All stated specifications are subject to change without notice or obligation.

Icom Inc.

1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan

Count on us!

A-6721H-1EX

Printed in Japan

© 2008 Icom Inc.



DECLARATION OF CONFORMITY

We Icom Inc. Japan
1-1-32, Kamiminami, Hirano-ku
Osaka 547-0003, Japan



Declare on our sole responsibility that this equipment complies with the essential requirements of the Radio and Telecommunications Terminal Equipment Directive, 1999/5/EC, and that any applicable Essential Test Suite measurements have been performed.

Düsseldorf 28th Nov. 2008
Place and date of issue

Kind of equipment: AIS RECEIVER

Icom (Europe) GmbH
Himmelgeister straÙe 100
D-40225 Düsseldorf

Type-designation: MXA-5000

Authorized representative name

Version (where applicable):

Y. Furukawa
General Manager

This compliance is based on conformity with the following harmonised standards, specifications or documents:

- i) EN 60945: 2002
- ii) EN 60950-1: 2001: A11: 2004
- iii) EN 62287-1 2006
- iv) EN 61993-2: 2002

Signature

Icom Inc.

<Intended Country of Use>

- AT BE CY CZ DK EE
- FI FR DE GR HU IE
- IT LV LT LU MT NL
- PL PT SK SI ES SE
- GB IS LI NO CH BG
- RO TR HR

• List of Country codes (ISO 3166-1)

	Country	Codes		Country	Codes
1	Austria	AT	18	Liechtenstein	LI
2	Belgium	BE	19	Lithuania	LT
3	Bulgaria	BG	20	Luxembourg	LU
4	Croatia	HR	21	Malta	MT
5	Czech Republic	CZ	22	Netherlands	NL
6	Cyprus	CY	23	Norway	NO
7	Denmark	DK	24	Poland	PL
8	Estonia	EE	25	Portugal	PT
9	Finland	FI	26	Romania	RO
10	France	FR	27	Slovakia	SK
11	Germany	DE	28	Slovenia	SI
12	Greece	GR	29	Spain	EP
13	Hungary	HU	30	Sweden	SE
14	Iceland	IS	31	Switzerland	CH
15	Ireland	IE	32	Turkey	TR
16	Italy	IT	33	United Kingdom	GB
17	Latvia	LV			



The MXA-5000 complies with the essential requirements of the European Radio and Telecommunication Terminal Directive 1999/5/EC, and that any applicable Essential Test Suite measurements have been performed.